



Quick Start Guide

Digital Touch Screen Electric Range

BEFORE YOU START

Remove the exterior and interior packaging. Remove the protective film on steel and aluminum parts. Check that all of the parts listed below are included with the unit.

- Oven Vent x 1 (Oven Vent with 2 screws) – Also called Backsplash
- Oven Racks x 2
- Rotisserie x 1
- Anti-tip Bracket x 2 with 6 expansion screws
- Bottom Cover x 1
- Oven Drip Pan x1
- User Manual x 1
- Installation Guide x 1
- Quick Start Guide x 1

INSTALLATION

- Electric cord is sold separately and is not included. Please check with your retailer for the correct electrical cord to use and to arrange for installation if you desire this additional service.
- You must use a You need to buy an extra 3-conductor or 4-conductor UL listed range cord rated at 40 amps, 8 AWG with 120/240VAC electrical system. The common 110V electrical system is Not work for Lanbo electric range.
- The oven vent (backsplash) releases hot air and moisture from the oven, and should not be blocked or covered. Blocking or covering the oven vent will cause poor air circulation, affecting cooking and cleaning results. Do not set plastics, paper or other items that could melt or burn near the oven vent.
- When connect with the power, the heat elimination fan located in the upper back of the unit will start to work for self-inspection.
- Please follow the “**Installation Guide**” or “**User Manual Page**”.



SURFACE OPERATION

- The control knobs have a variable of power output from low to high with a number of positions. The range of heat is increased by turning the knobs to thicker dotted lines, decreased by turning the knobs to thinner dotted lines around knobs.
- To switch on, always lightly press the control knobs inwards then rotate.



OVEN OPERATION ON DIGITAL TOUCH SCREEN

Step 1: Long touch “Power” icon to turn on the range

Step 2: Set “Clock” the first time of use. Confirm your setting by click the “Clock” button again.

Step 3: Select Cooking Model by click button Broil, Bake, Broil Conv., Bake Conv. Air Fry, Preheat or Keep Warm

Step 4: Set Cooking Time by click “Timer” button and then confirm your setting by click “Timer” button again.

Step 5: Set Cooking Temperature by click “Temp” button and then confirm your setting by click “Temp” button again. If you want to check the actual oven temperature during cooking, click “Temp” button twice, the actual oven temperature is displayed. Long touch “Temp” button for 3 seconds to switch C/F.

Step 6: Touch “Start/Pause” button to start cooking.

For more detail operation instruction, please refer to “User Manual”.



Any Question?



Need Conversation



Giving Advice

Contact us for help

www.lanboappliances.com

TEL: (833) 600-8766

Email: service@lanboappliances.com

